TOP AND CONSOLE PARTS

29"GAS DRYER

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

KitchenAid®

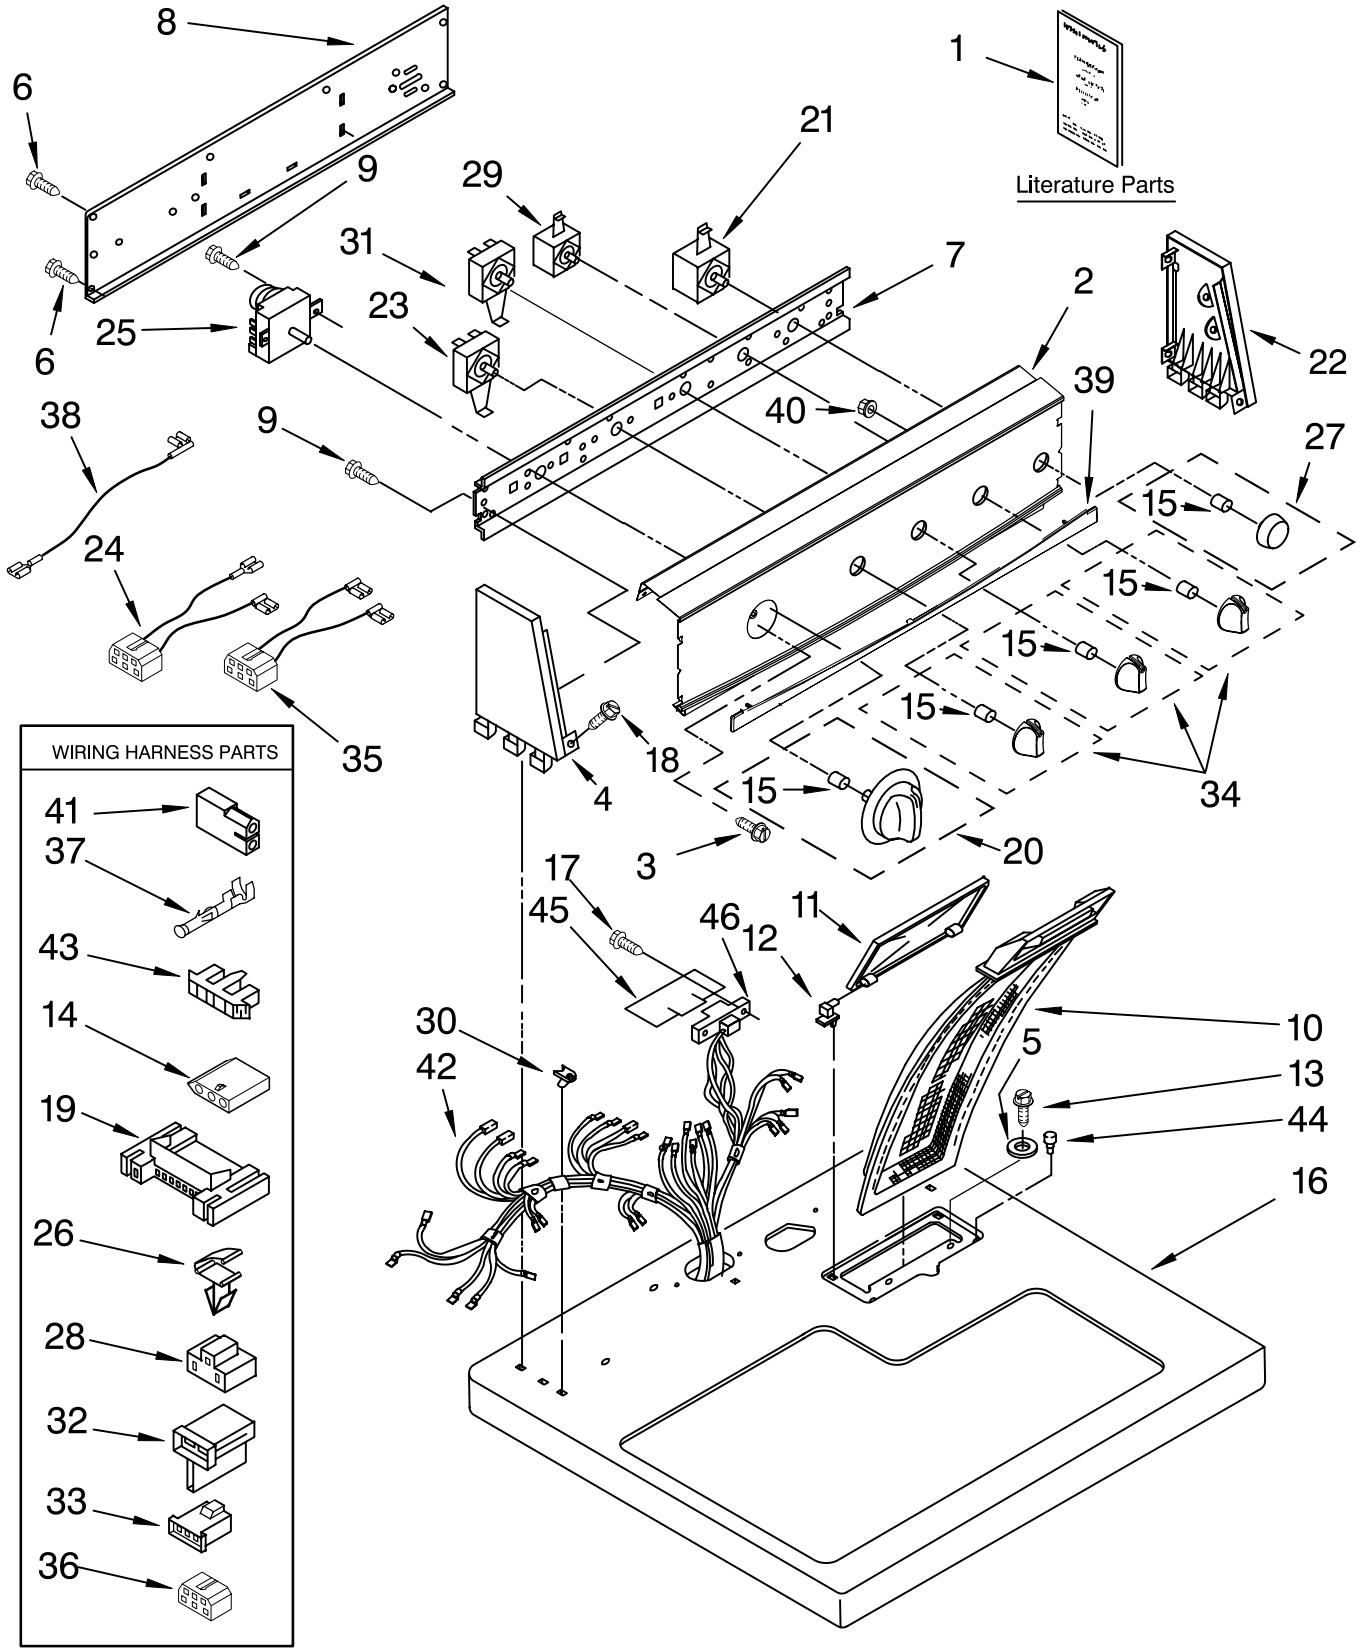

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8535889	Instructions, Installation
	LIT8535887	Guide, Use & Care
	LIT3979569	Label, Wiring Diagram
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	677818	Dryer
2		Panel, Control (Includes Illus. 39 & 40)
	3977978	White
	3977979	Biscuit
	3977980	Black
3	3400859	Screw, Grounding
4		End Cap (L.H.)
	8274353	White
	8274355	Biscuit
	3954772	Black
5	237446	Washer
6	693995	Screw, Hex Head
7	8271418	Bracket, Control
8	8274261	Panel, Rear Console
9	3390646	Screw, 8−18 x 5/16
10	349639	Screen, Lint
11		Cover, Lint Screen
	8283378	White
	8283380	Biscuit
	3979324	Black
12	3978605	Hinge, R.H.
	3978606	Hinge, L.H.
13	688983	Screw, 8−18 x 5/8
14	3936144	Connector (3−Circuit)
15	688805	Clip
16		Top
	8274386	White
	8274387	Biscuit
	3978787	Black
17	337686	Screw, 8−18 x 1/2
18	388326	Screw, Console
19	3395683	Connector, Housing
20		Knob, Timer
	8536930	White
	8536931	Biscuit
	8536932	Black
21	3398094	Switch, Push To Start
22		End Cap (R.H.)
	8274349	White
	8274351	Biscuit
	3954771	Black
23	3399640	Switch, Temperature
24	8283276	Wire, Jumper
25	3976570	Timer, 60Hz.
26	3394427	Clip, Harness
27		Knob, Push To Start
	8536921	White
	8536922	Biscuit
	8536923	Black
28	3401144	Connector (PTS Relay)
29	3398093	Switch, Signal
30	357213	Nut, Push−In (2)
31	3405156	Switch Finish Gaurd
32	3403499	Connector, 2−Position (Gas Valve)
33	3403498	Connector, 3−Position (Gas Valve)
34		Knob, Control (3)
	8536924	White
	8536925	Biscuit
	8536926	Black
35	8283279	Wire, Jumper (Temperature)
36	3347243	Connector 6−Circuit
37	94614	Terminal
38	3401668	Wire, Jumper
39		Spacer, Console
	8536944	White
	8536945	Biscuit
	8536946	Black
40	8533828	Nut, 3/16
41	717252	Receptacle, 2−Way
42	8299881	Harness, Gas
43	3397269	Connector, Timer
44	297535	Bumper, Lint Lid
45	3390537	Control, Electronic
46	3391885	Connector, Edge

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	279948	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
	346764	Kit, Hold−Down (Gas Dryer Mobile Home Installation)
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	4392899	Biscuit
	72032	Ebony
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	4392901	Biscuit
	786020	Ebony
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	4392900	Biscuit (Uncut)
	786032	Ebony (Uncut)

CABINET PARTS

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

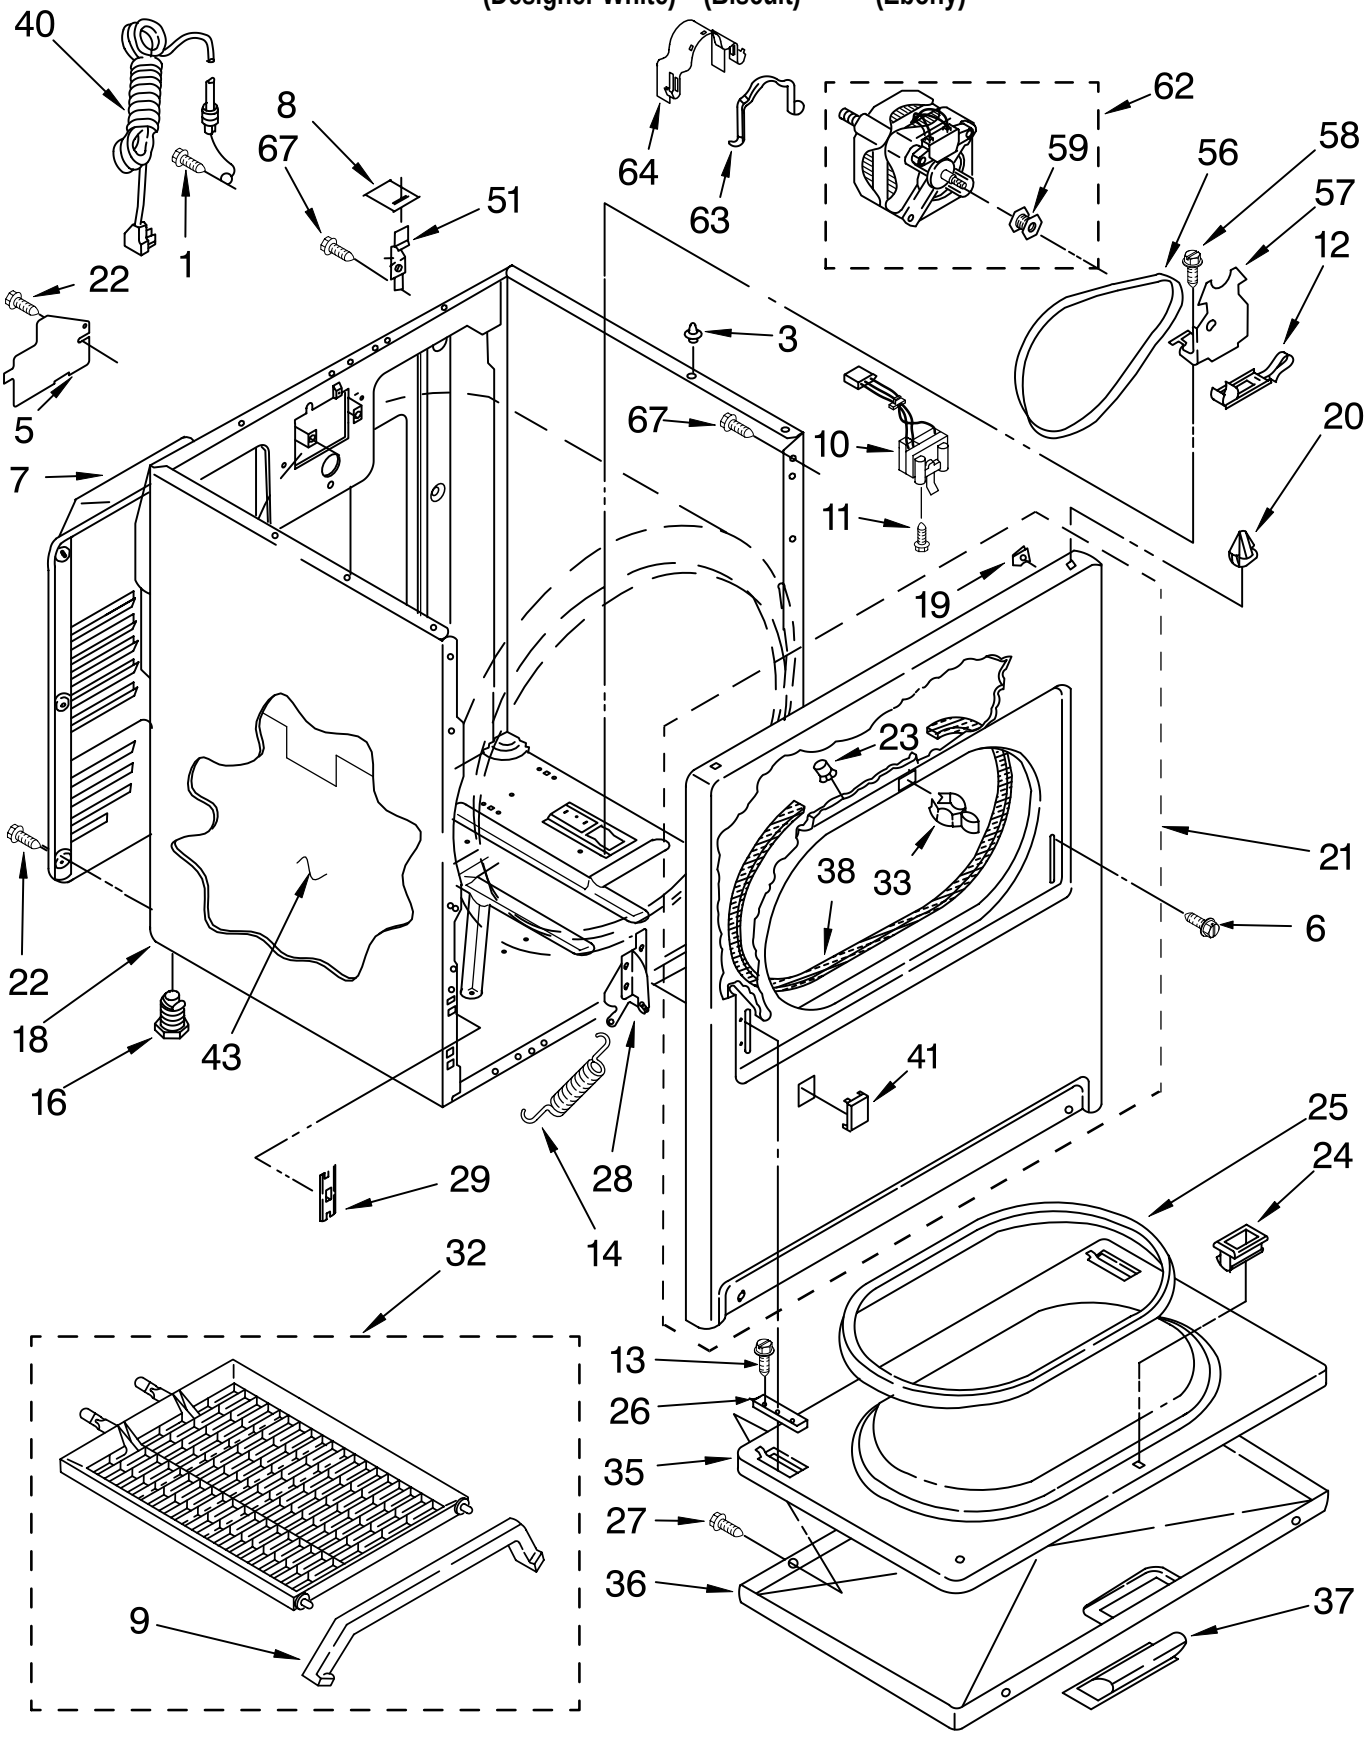

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

Illus. No.	Part No.	DESCRIPTION
1	697776	Screw, 10−32 x 5/8
3	98669	Locator, Top
5	3396795	Cover, Block Terminal
6	342043	Screw, 10−32 x 3/8
7	3396805	Panel, Rear
8	18849	Pad, Top Hinge
9	692989	Dry Rack Bracket
10	3406107	Door, Switch Assembly
11	697773	Screw, 6−20 x 7/8
12	3394332	Idler & Slide Assembly
13	3357011	Screw, 10−16 x 1/2
14	692495	Spring, Door (2)
16	3392100	Foot, Plastic Dryer (4)
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
18		Cabinet
	8530603	White
	8530606	Biscuit
	8530605	Black
19	98234	Clip, Ground (2)
20	18776	Lock, Front Top (2)
21		Panel, Front
	3395197	White
	3977243	Biscuit
	3978796	Black
22	693995	Screw, Hex Washer Head
23	685203	Clip, Felt Pad (2)
24	3389441	Catch, Door
25	3390731	Seal, Door
26	337189	Clip, Hinge (2)
27	694091	Screw, 8−18 x 3/8
28	8066056	Hinge, R.H.
	8066057	Hinge, L.H.
29	3394083	Clip, Front Panel
32	3406839	Dry Rack Assembly
33	696144	Strike, Door
35	695737	Door, Rear
36		Door, Front
	3393549	White
	3977241	Biscuit
	3403110	Black
37		Handle, Door
	8536933	White
	8536934	Biscuit
	8536935	Black
38	3406129	Seal & Bearing Assembly
40	344020	Cord, Power
41		Plug−Panel Front
	3394975	White
	3394978	Biscuit
	3394979	Black
43	3402709	Board, Sound Dampening
51	238088	Hinge, Top (2)
56	8066065	Belt, Drive
57	348780	Base, Motor
58	3400500	Bolt, 5/16−18 x 3/4
59	3394341	Pulley, Motor
62	8538262	Motor, Drive 60 Hz.
63	660658	Clamp, Motor
64	3404162	Clamp, Motor (W/Shield)
67	337686	Screw, 8−18 x 1/2

BULKHEAD PARTS

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

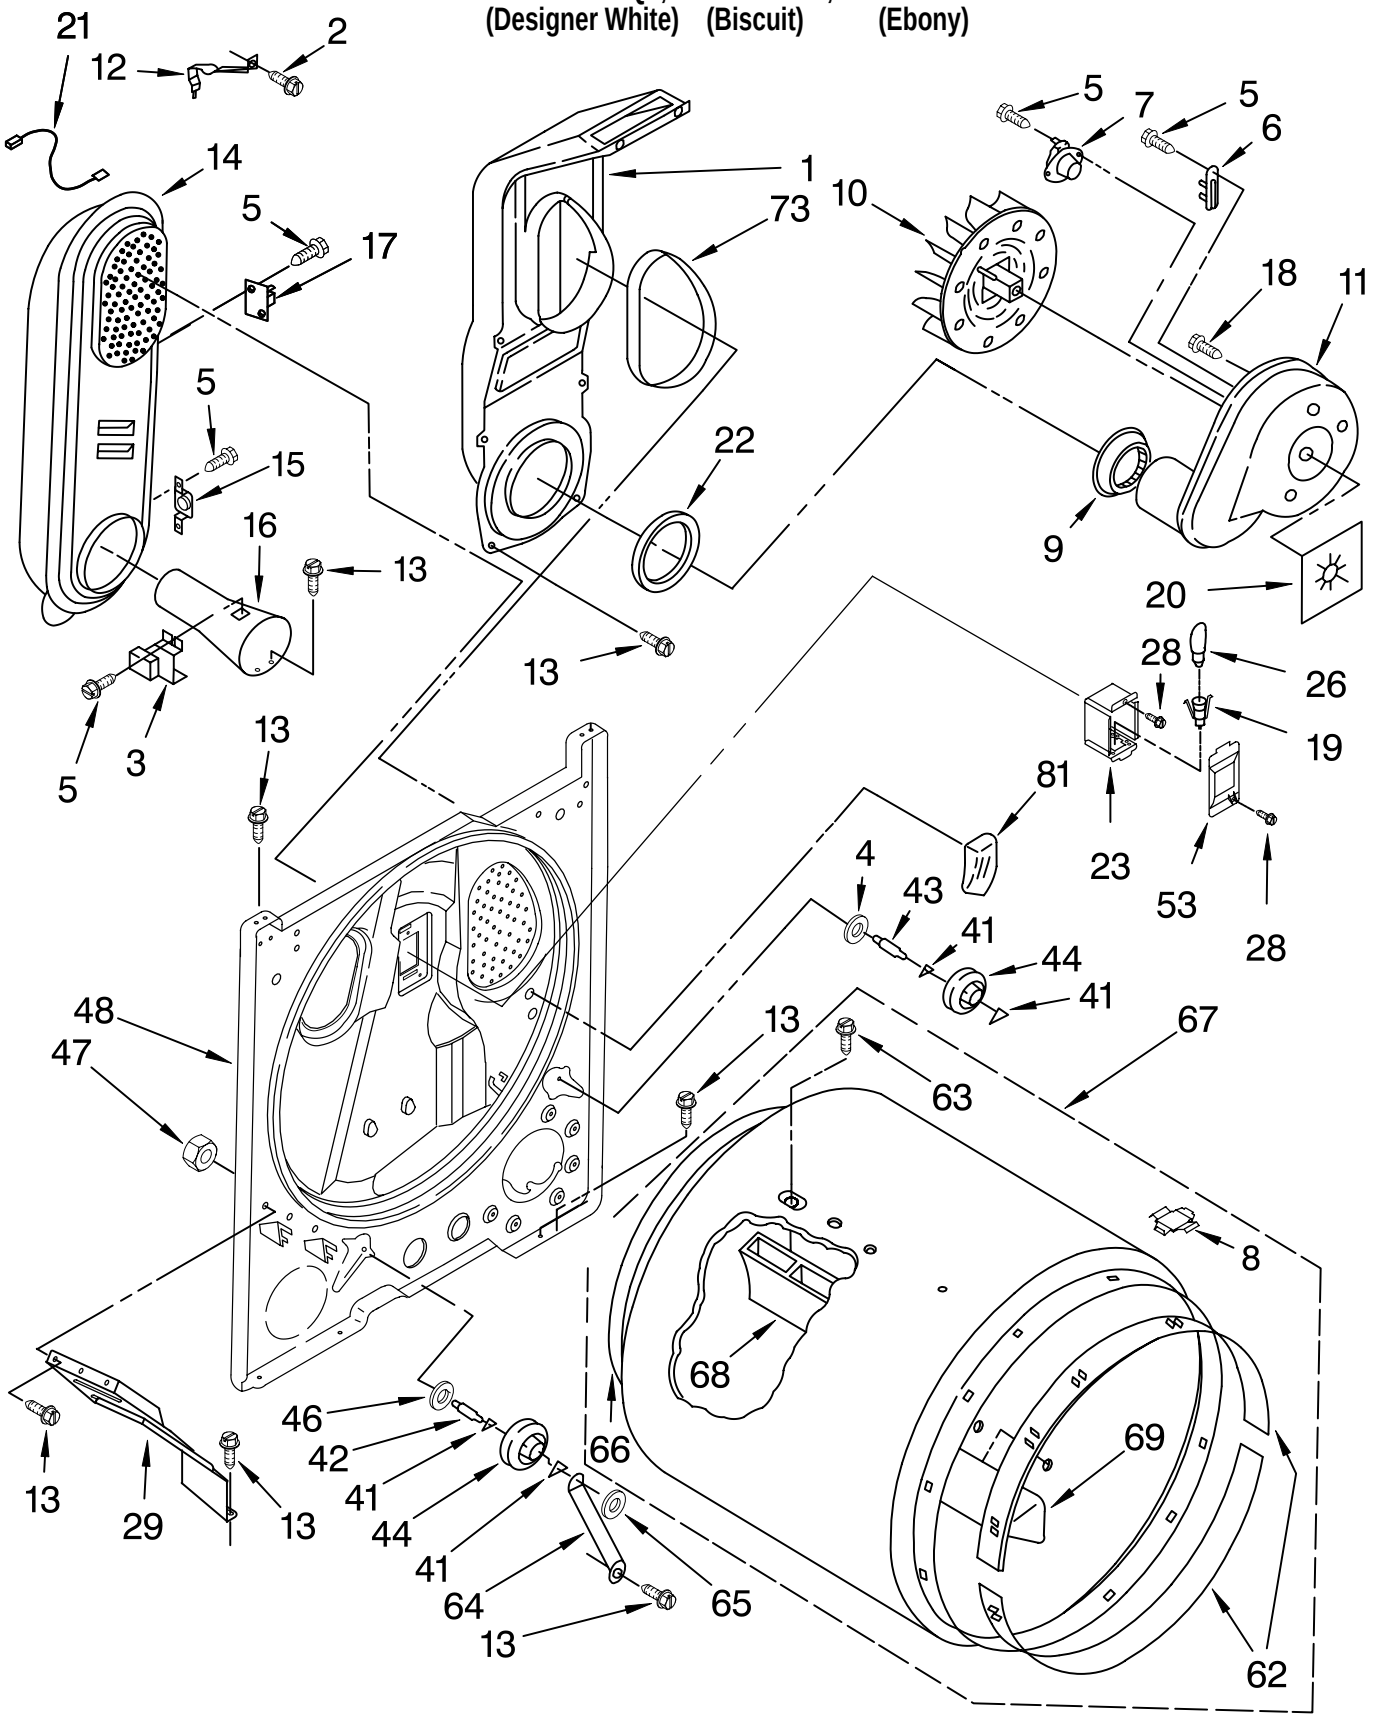

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8−18 x 5/8
3	338906	Radiant, Sensor
4	3388703	Washer−Support
5	90767	Screw, 8−18 x 3/8
6	3392519	Thermal Fuse
7	3387134	Thermostat, Internal−Bias
8	8066086	Drum Hole Plug
9	696302	Shield, Exhaust
10	694089	Wheel, Blower (Includes Illus. 20)
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	8530285	Box, Heater
15	3403140	Thermostat, 205°F (96°C)
16	8066049	Funnel, Burner
17	280010	Kit, Thermal Cut−Off (Includes Illus. 15)
18	3390647	Screw, 8−18 x 1/2
19	3403634	Socket Assembly
20	3394196	Seal, Blower
21	3401707	Wire, Jumper
22	347139	Seal, Lint Chute
23	3977373	Bracket, Drum Light
26	3406124	Light Bulb
28	487909	Screw, 8−15 x 1/2
29	3406022	Bracket, Bulkhead
41	690997	Tri Ring (4)
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	3403414	Bulkhead
53	3402841	Lens, Light Drum
62	692526	Ring, Bearing (2)
63	97787	Screw, 11−16 x 3/4
64	3976434	Bracket, Shaft
65	90296	Clip
66	3406130	Seal, Rear
67	695587	Drum Assembly
68	692490	Baffle, Drum (Long) (2)
69	3403636	Baffle, Drum (Short) (1)
73	339956	Seal
81	3976479	Pad, Sensor

8318272 BURNER ASSEMBLY

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

USE WITH TYPE 1 − NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

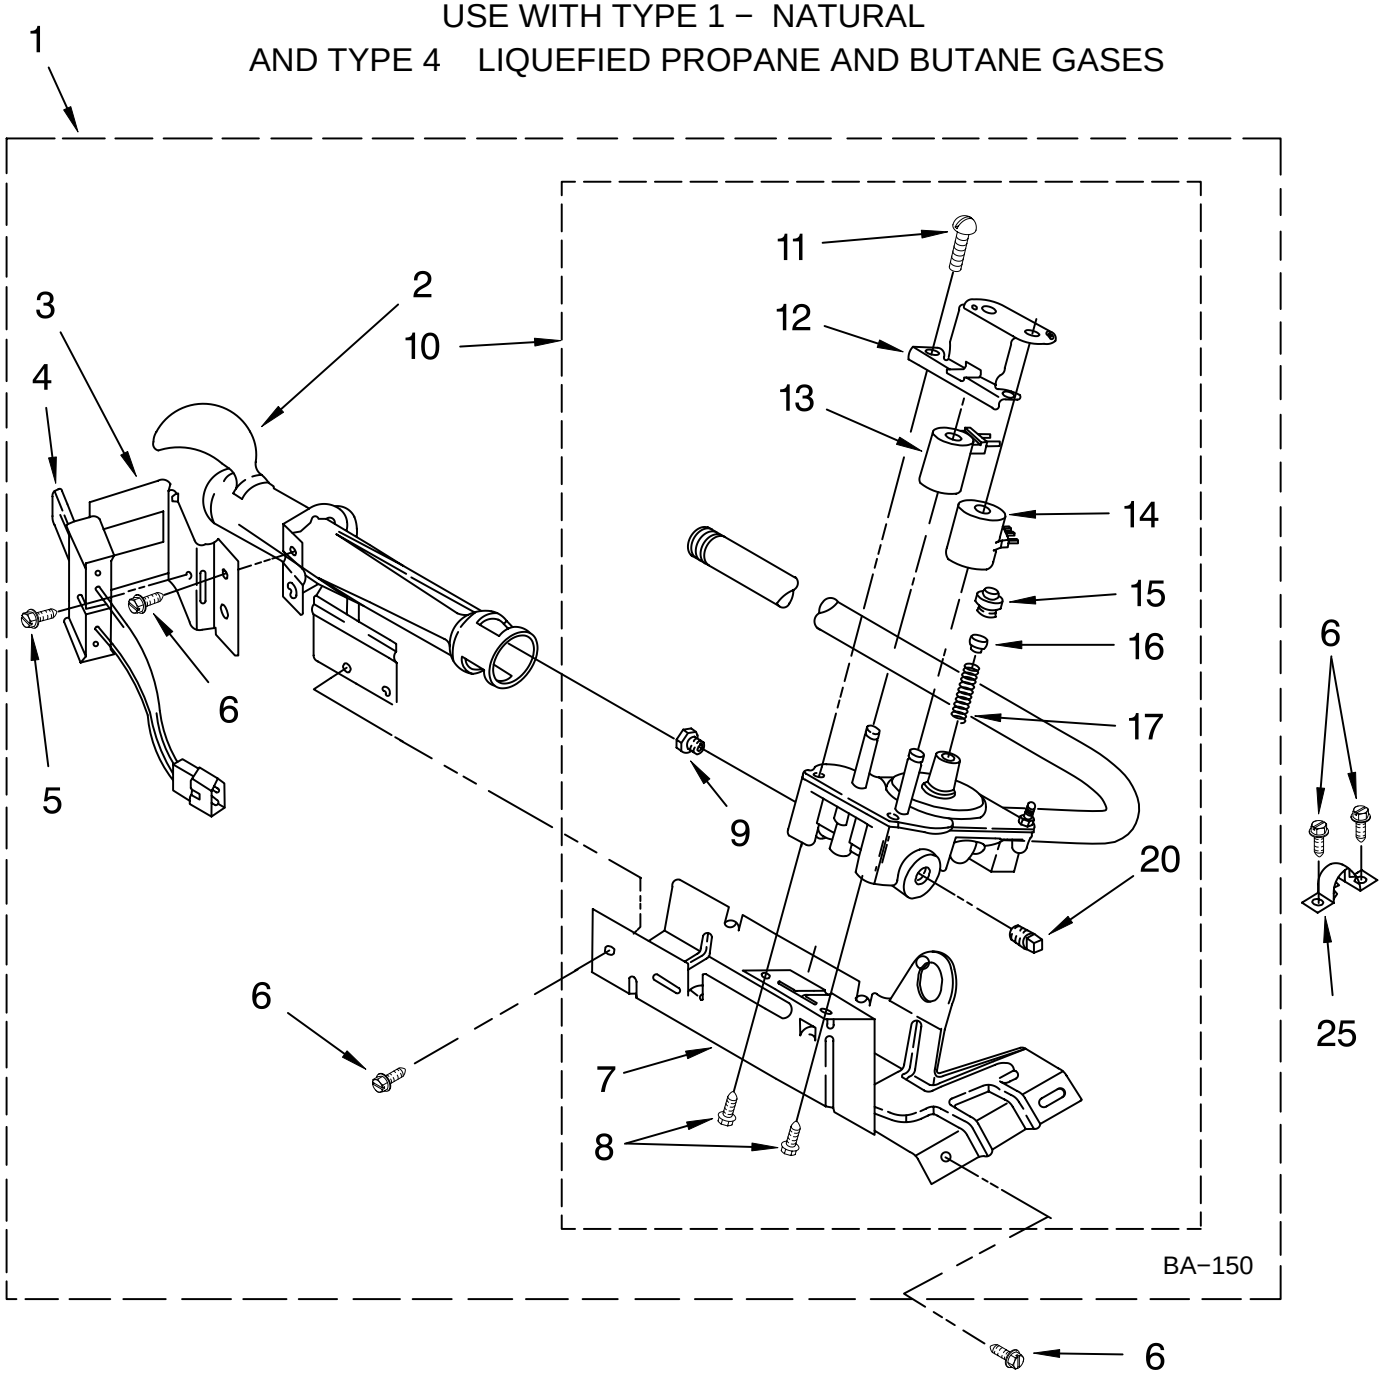

8318272 BURNER ASSEMBLY

For Models: KGYS850LQ0, KGYS850LT0, KGYS850LE0
(Designer White) (Biscuit) (Ebony)

USE WITH TYPE 1 − NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

Illus. No.	Part No.	DESCRIPTION
1	8318272	Burner Assembly 60 Hz. (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8−32 x 5/8)
6	343641	Screw, 10−16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8−18 x 3/8
9		Orifice, Burner
	234826	Type 1
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, 60 Hz. (Includes Pipe & Illus. #7)
11	694421	Screw, 8−32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
20	239822	Plug, Pipe
25	341029	Clamp, Pipe

Following Parts Not Illustrated

694572 Conversion Kit
(Type 1)
to Type (4) L.P.G.

BA−150